

MOUNT VERNON

E-Z Instructions for the Scoreboard

("Daktronics" model)

The scoreboard has two functions: Game Clock & Time of Day Clock
During non-hockey events the scoreboard should be set for the time of day.

To switch to game clock:

Unplug the control panel at the wall outlet. Plug back in.
The control panel screen will ask you to "Enter Code". Type 62 and press Enter.
The control panel screen will ask if you want 1/10 seconds. Press Enter.
Game clock should read 20:00. Control panel screen should read: 20:00.0
Press Set Time. Enter amount of time desired (ex: 5:00.0 for warm-ups. 15:00.0 for game time), Press Enter.
Press start button to begin countdown. Press stop to freeze countdown. Repeat as needed.

To change periods: Press period button. Type in new period number: 1 - 4. Press Enter.

To change the score: Press the score +1 button on either the Home or Away sections on the left side of the control panel.

To manually change the score: Press the score button on either the Home or Away sections on the left side of the control panel and then type in the correct number (0-9) on the right side of the control panel. Press Enter.

To add/adjust penalties: Press the Player Penalty button on either the Home or Away sections. Press Enter to activate. Press Enter again - the screen should read 2:00.0. At this point you can change the time from 2 minutes to another time by manually entering the desired time (ex: 5:00.0). Press Enter again to confirm. Penalty time will show up on the scoreboard. Continue this process until all penalties are entered. The machine will "stack" penalties (hold penalties in reserve until listed penalties have expired). You can also enter penalties following the same process while the game clock is running.

To clear penalties: Press the Player Penalty button on either the Home or Away sections. Use the arrow up or arrow down keys to choose the penalty you wish to clear in the screen (the one with the shortest time remaining should come off first, unless it is a major penalty).
Press Clear button. Press Enter.

To get the official's attention press Manual Horn.

To switch from game clock to time of day:

Unplug at control panel at the wall outlook. Plug back in.
The control panel screen will ask you to "Enter Code". Type 99 and press Enter.
The screen will give you instructions: Press Clear, Time, Enter.
Press Clear. Enter Time of day (ex: 12:00). Press Enter.