

SCOREBOARD INSTRUCTIONS

NHL & OLY Rinks at Compuware Arena

Turn on Scoreboard (switch on back of console)

Enter code: 63

Press ENTER

Press ENTER again for the 10ths of a second mode or CLEAR for non-10ths mode.

Push SET TIME

Enter time

Push ENTER

To Enter Score

Push SCORE +1 on either guest or home

If you make a mistake, push ●SCORE and enter correct number of goals, push ENTER

To Enter Penalties

Push PENALTY arrow

Push ●PLAYER ●PENALTY

Push ENTER

Enter PLAYER NUMBER

Push ENTER

Enter PENALTY TIME

Time and number will now appear in the penalty section.

To Clear Penalties

Push ●PLAYER ●PENALTY

Push Up Arrow above MENU button to select penalty

Push CLEAR

Push ENTER

To Stop & Start Time

Press START button to start time

Press STOP button to stop time

Please turn the console off when you're done! ☺