

## RUNNING THE SCOREBOARD

*NOTE: The Clear/No and Enter/Yes keys are to the left and right of the 0 key on the number keypad of the console.*

### GETTING STARTED

-Turn on the switch under the center of the scorekeepers table

-Display will read: "PREV CODE 4401 RESUME GAME?"

-Press "Clear/No" (see power failure note below)

-Display will then read: "SELECT CODE CODE 4401"

-Press "Enter/Yes" and scoreboard will come on

\*IN THE EVENT OF A POWER FAILURE- The console will store the information at the point where the power goes out. When power is restored, turn the scoreboard back on (see above) display will read; "Resume Game?" push Enter/Yes. You will now have the information back.

### TO SET MAIN CLOCK

-Press "set main clock" (lower right side of console)

-Enter amount of time using the number keypad. Example; for 5 minute warm up press 5000 enter, for 12 minutes press 12000 enter

-Use the "Start" and "Stop" keys to control the time

### TO RECORD A GOAL

-Choose the correct side of board (home on the left, visitor on the right)

-Press "Score +1"

-If you make a mistake, correct the goal number by pressing "Score-1"

### TO CHANGE THE PERIODS

-Press "Period +1"

### HORN

-Horn will automatically go off when clock runs out

-To manually sound the horn, press "Horn"

### TO ENTER A PENALTY (clock must be stopped)

-Choose the correct side of the board (home on the left, visitor on the right) and press "Player Penalty" and "Enter/Yes"

-Enter the penalized players number and press "Enter/Yes"

-For a 2 minute penalty, press "Enter/Yes"

-For any other penalty time, enter the penalty time using the number keypad, and press "Enter/Yes"

### TO CLEAR A PENALTY (clock must be stopped)

-Choose the correct side of board (home on the left, visitor on the right)

-If only 1 penalty is on the board, press "Delete Penalty" and then "Enter/Yes"

-If more than 1 penalty is on the board, use the up/down arrows and select which penalty you want to delete and press "Enter/Yes"

-If you want to clear all penalties, press "Clear All Penalties" on either the home or visitor side and then press "Enter/Yes"

### TO USE THE TIME OUT FEATURE (clock must be stopped)

-Press the "Time out on/off" button

-Press "Enter/Yes" The console clock will count down in the console display from 1 minute to 0, and the horn will sound (this will not affect the main clock)

\*If you are prompted to "adjust penalty timers", press "Clear/No"

### DO NOT PRESS THE FOLLOWING BUTTONS!!!!

"Auto Horn"

"Count Up/Down"

"Enable or Disable Penalty Timers"