

# FORZA

ProFlex Soccer Goal










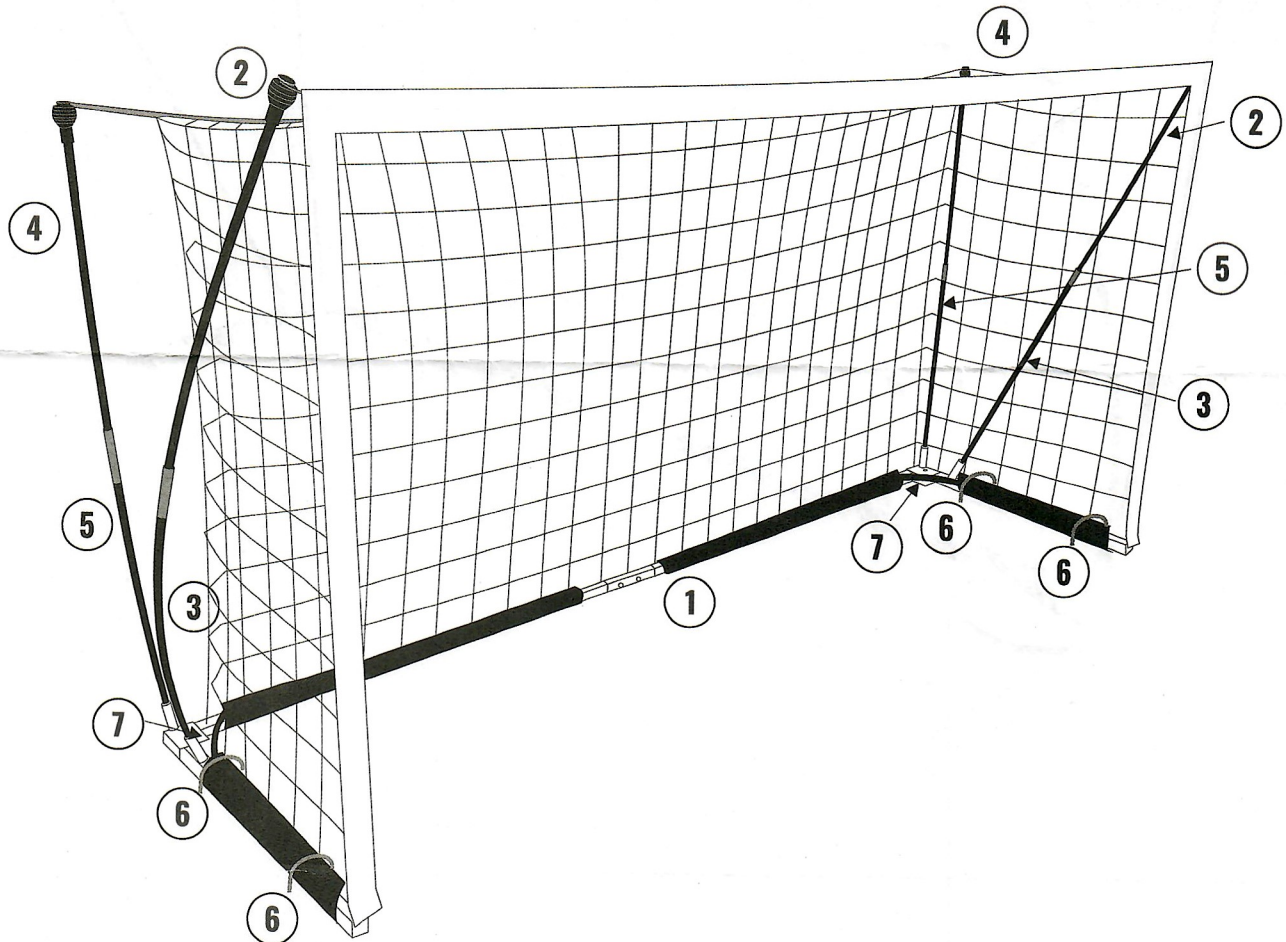
**NET WORLD SPORTS»**

    @NetWorldSports

[www.networldsports.co.uk](http://www.networldsports.co.uk) // +44 (0) 1691 683 807 // [cs@networldsports.co.uk](mailto:cs@networldsports.co.uk)

[www.networldsports.com](http://www.networldsports.com) // 1-866-861-9095 // [cs@networldsports.com](mailto:cs@networldsports.com)

Part	Component	Description	Qty
1		Frame & net	1
2		Long pole	2
3		Long pole	2
4		Short pole	2
5		Short pole	2
6		U peg	4
7		Locking pin	2




### IMPORTANT


- This product should be assembled by an adult.
- Please check the product is fully assembled before use.
- Once assembled this product is under tension take extreme care when disassembling.
- Do not climb, hang or swing on the frame or any other part.
- Ensure product is secured to ground before use.
- This product should be used on a flat surface for best results.
- This product is not suitable to use in high wind.
- This product is not a toy, injury can occur if used incorrectly.

# Assembly guide




**Step 1: Carefully unfold the frame.**

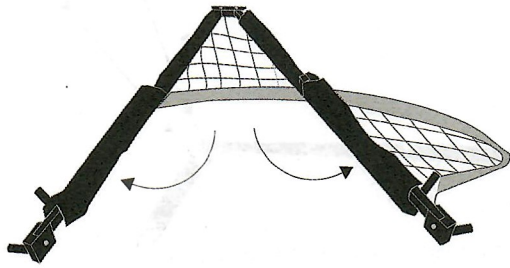


**Step 2: Extend the back bar until the push buttons locate into place.**

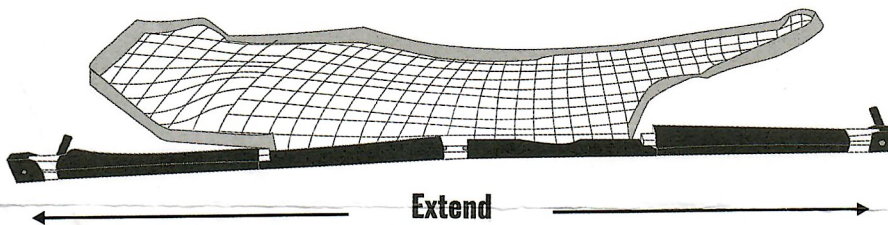


**Step 3: Fold out the side frame ensuring it clicks into place, then fit locking pin.**

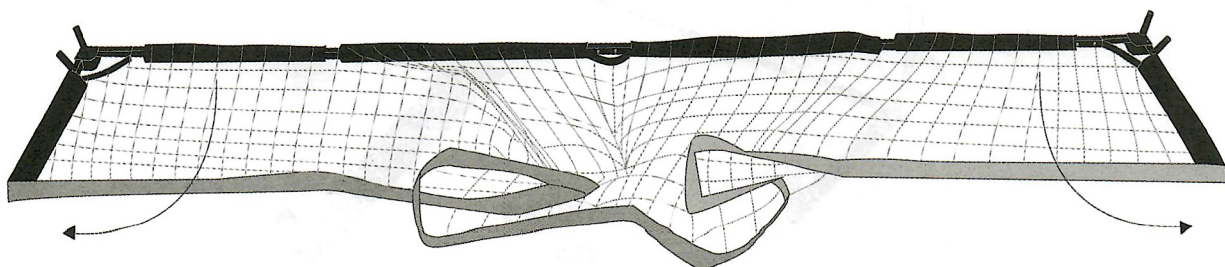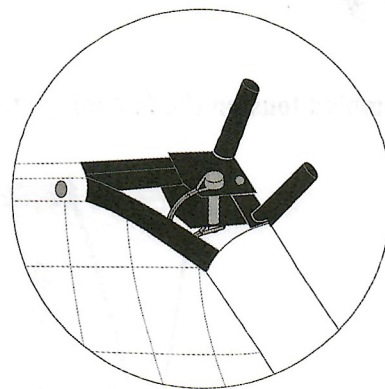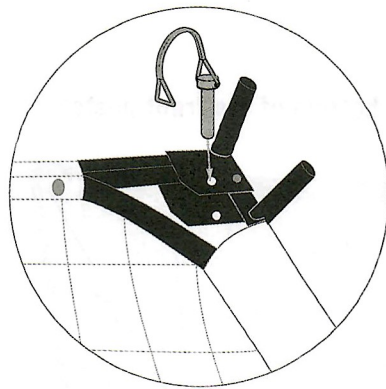

**Step 4: Assemble short and long fibreglass poles and locate them into place on the frame.**

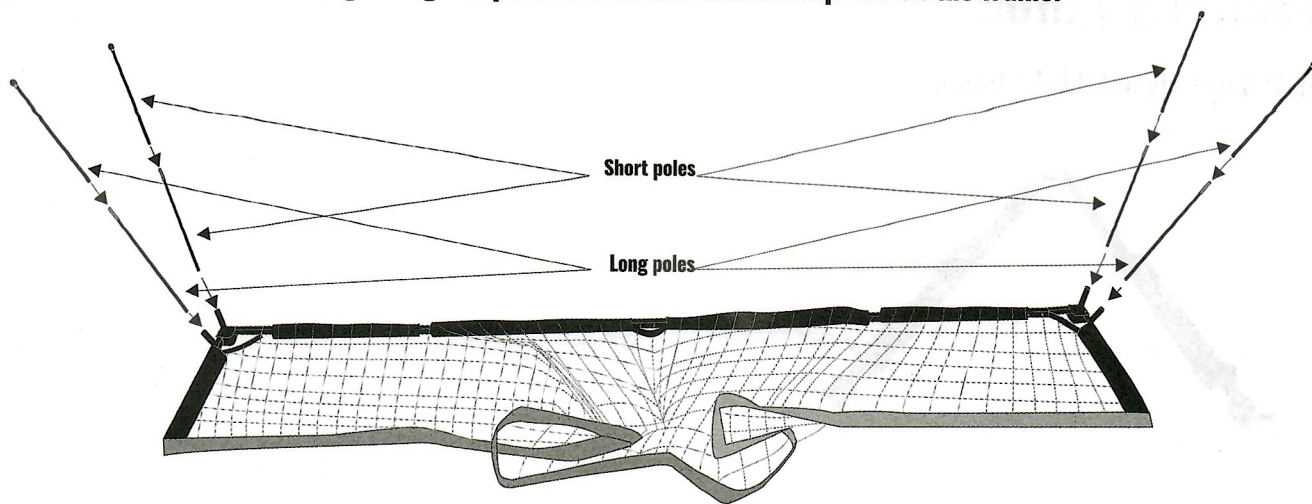

**Step 5: locate the top corner of the net onto the front fibreglass pole, then find the back corner and locate this onto the rear fibreglass pole repeat this for the other side.**

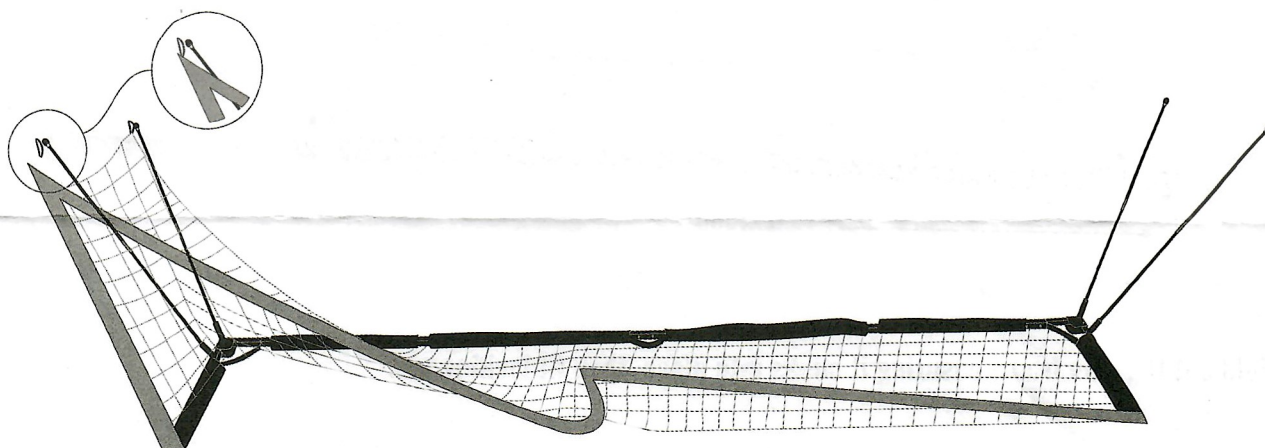

**Once net is assembled tension the fastening strip at the bottom of the front posts**

