 

Rink 1

Mites:


- Turn clock on (switch on right side).
- Do you want to start where you left off? NO
- Do you want to go to a bookmark? Yes
- Enter bookmark #: 5 Yes
- Start the clock by hitting toggling the switch

Bookmark 5 automatically runs a 24-minute period with a horn every two minutes. If you need to run shorter periods for time. Just enter set time and then enter the time you want to run.



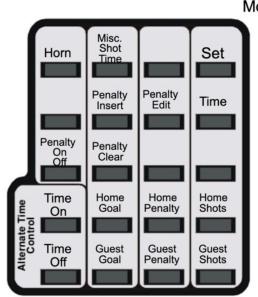



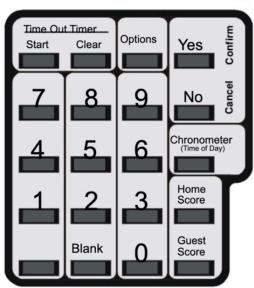

Turn power on - switch is on the right-hand side of the machine towards the back

Display: Do you want to start where you left off? NO

Display: Do you want to go to a bookmark? NO

Display: Enter Model Code...871 (written on the machine)

Display: Operate wireless? YES

Display: Select a group? Hockey... YES

Use penalty time out? YES

To Set Time:

- Press SET
- Press TIME
- Enter the number of minutes time you wish to display (00:00)
- Press YES
- Display will then read period.
- Enter the Period
- Press YES

Note standard is 03:00 warm-up and 3, 15:00 periods

To Set Score:

Before the game set both scores to 0

- Press HOME SCORE
- Press 0
- Press YES
- Press GUEST SCORE
- Press 0
- Press YES

To start and stop the clock flip the toggle switch on the hand-held switch.

To add a goal:

- Press either HOME SCORE or GUEST SCORE
- Press 1 to add a goal
- Press YES

NOTE: If you need to correct the score, press **SET—HOME SCORE** or **GUEST SCORE** and then type the appropriate # of goals

Penalties:

Setting:

- Press SET
- Press GUEST Penalty or HOME Penalty
- Enter time 02:00 for minor or 05:00 for major
- Display will ask for a player number. Player numbers are not displayed. Enter 01 for the first, 02 for the second and so on.
- Press YES

Clearing:

- Press HOME Penalty or GUEST Penalty
- Press Penalty Clear
- Press YES

•

Rink 2

Mites:

- Turn power button on right side to the top on position.
- Press **OPTIONS** until PROFILES is displayed
- Press YES
- Press YES when LOAD PROFILE is displayed.
- Press 5
- Press YES
- Turn toggle switch to the on position to start the clock.

Bookmark 5 automatically runs a 24-minute period with a horn every two minutes. If you need to run shorter periods for time. Just enter set time and then enter the time you want to run.

Squirts—Midgets:



Turn power on - switch is on the right-hand side of the machine towards the back

To Set Time:

- Press SET
- Press TIME
- Enter the number of minutes time you wish to display (00:00)
- Press YES

To Set the Period

- Press **PERIOD**
- Enter the # of the period
- Press YES

Note standard is 03:00 warm-up and 3, 15:00 periods

To Set Score:

Before the game set both scores to 0

- Press HOME SCORE
- Press 0
- Press YES
- · Repeat for Guest Score

NOTE: Rink 2 has the option of displaying shots on goal. Do not enter shots on goal unless you want to have an argument with a goalie's parent. It is not necessary and not worth the fight.

To start and stop the clock flip the toggle switch on the hand-held switch.

To add a goal:

- Press either HOME SCORE or GUEST SCORE
- Press 1 to add a goal
- Press YES

NOTE: If you need to correct the score, press **SET—HOME SCORE** or **GUEST SCORE** and then type the appropriate # of goals

Penalties:

Setting a Minor Penalty

- Press Home NEW MINOR or Guest NEW MINOR
- Display will read: New 2:00 ##◀
- Enter the offending players ##
- Press **YES** to accept the standard 2-minute penalty

Setting a Major Penalty

- Press Home NEW MINOR or Guest NEW MINOR
- Display will read: New 5:00 ## ◀
- Enter the offending players ##
- Press **YES** to accept the standard 5-minute penalty

Clearing:

- Press Home VIEW PENALTY or Guest VIEW PENALTY until the correct penalty is displayed
- Press CLEAR PENALTY
- Press YES