

## Scoreboard Operation at Main Park/TC JESTER

We depend on volunteers to assist in operating the scoreboards during games. During each game we require a volunteer of the team listed as visiting/away to run the scoreboards. Scoreboard controllers are typically plugged in and ready to go, but in the event, there is not one connected please look for an ODC volunteer in orange for assistance.

When the controller is plugged into the 3 pin receptacle the red light will be on to indicate that both the controller and the scoreboard are ready to go.

### Important Functions

**BALL**-This button will advance the ball indicator by one, then to blank

**STRIKE**-This button will advance the strike indicator by one, then to blank

**HOME**-This button will advance the home score digit by one. To reset the score to "0" press **RESET** then **HOME**. To enter a number i.e. 12 press # then 1 # then 2 then **HOME**

**INN**-This button will advance the inning. To reset the inning to "0" press **RESET** then **INN**.

